



## How to install our Styrofoam Ceiling Planks

You will need the following tools and materials to install your panels properly:

<b>Sharp utility knife</b>	to cut the panels
<b>Adhesive</b>	to glue the panels to the ceiling
<b>Caulking gun</b>	To apply the adhesive to panels
<b>Measuring tape</b>	For more precious installation and alignment
<b>Chalk line</b>	to mark long straight lines

Recommended Adhesive: Loctite Power Grab All-Purpose or AcrylPro Ceramic Tile Adhesive. All the materials and tools listed above can be found at any local Home Depot or Lowe's store. If you plan to paint the panels, be sure to use only **water-based paint**.

***⚠ Caution: Use care when cutting the panels to avoid serious injury.***


Surface Preparation: Remove any loose plaster, paint, wallpaper, etc. Fill cracks and imperfections using appropriate fillers, gypsum, or mortar. Clean the surface thoroughly to eliminate dust, grease, wax, and other debris.

**IMPORTANT!!! Do NOT apply tiles over soft or unstable popcorn ceilings. If the popcorn texture is soft or unstable, it must be removed before installation. To do this, soak it with water and scrub it off the ceiling.**


Start panel installation from the most visible corner of the wall.

Apply adhesive to the back of each panel. (Installing tiles over popcorn ceilings requires more adhesive than on plain surfaces.)

Install the planks one row at a time, using a butt joint method.

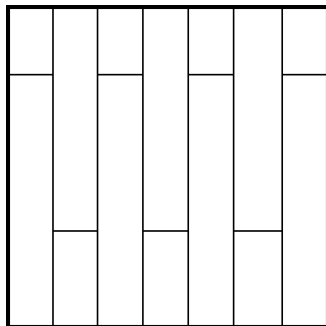

***Scan the QR code to watch the installation video.***

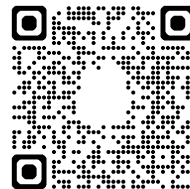

If you have any further questions, please contact us on [info@euro-deco.net](mailto:info@euro-deco.net)

[www.euro-deco.net](http://www.euro-deco.net)